



- | | | |
|-------|---|--------------------|
| (E) | Instrucción de montaje
¡Leer primero! | Portaequipajes |
| (GB) | Assembly instructions
Read first! | Roof racks |
| (F) | Instruction de montage
Lire en premier! | Galleries |
| (D) | Montageanleitung
Zuerst lesen! | Dachgepäckträger |
| (PT) | Instruções de montagem
Ler primeiro! | Porta bagagens |
| (PL) | Instrukcja montażu
Najpierw przeczytaj! | Bagażnik dachowy |
| (CZ) | Montážní návod
Čtěte pozorně! | Strešní nosiče |
| (HU) | Szerelési Utasítás
Először olvassd el! | Csomagtartó |
| (RO) | Instructiuni de montaj
Intai cititi! | Krovni nosač |
| (HR) | Detaljne upute
Prvo procitati! | Portbagaj |
| (GR) | Διαβάστε προσεκτικά τις
Οδηγίες Συναρμολόγησης! | Μπάρες Οροφής |
| (TR) | Öncelikle montaj:
Talimatlarını okuyunuz! | Taşıyıcı sistem |
| (RU) | Инструкции по монтажу
Сначала прочитайте! | Багажники на крышу |
| (I) | Istruzioni di montaggio
Leggere per primo! | Portabagagli |
| (NL) | Montagehandleiding
Eerst lezen! | Imperiaal |
| (SLO) | Navodila za sestavljanje
Preberite! | Strešne košare |

911-351

Lv7 2017-r1

Modelo-model:



Evo Rack Alu A23-126

Lote-Lot-Lot-Lot:

02-18

Peso-Weight-Poids-Gewicht:

22,92 kg

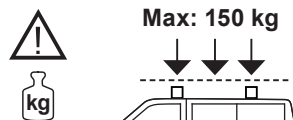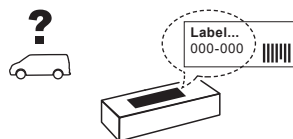

CEE - EEC type approval:


E9 26 R- 03 3024



CITY CRASH (✓)
According to ISO/ P. AS 11154:2006

CRUZBER SA
ES-A14018311
P.I. Las Salinas II
14960 - Rute - Spain
www.cruzber.com





(E) Contenido embalaje: ¡Verificar!

x 1

x 1

(GB) Package content: Check!




(F) Contenu d'emballage: Vérifier!

(D) Packungsinhalt: Überprüfen!

x 1

x 1

(PT) Contéudo embalagem:
Verificar!



(PL) Zawartość opakowania:
sprawdź!

(861-114)

(821-142) 126 cm


(CZ) Obsah balení: Zkontrolujte!

(HU) Csomag tartalma: Ellenőrizd!

x 7

x 1

(RO) Pachetul contine: Verificati!



(HR) Sadržaj paketa: Provjeri!

(827-462) 126 cm

(716-340) 126 cm

(GR) Ελέγξτε το περιεχόμενο: του
πακέτου!

x 6

x 4

(TR) Paket içeriğini: Kontrol ediniz!



(RU) Содержание упаковки:
Проверьте!

(I) Contenuto della confezione:
Controllare!

(813-061)

1x (805-185)


1x (805-186)

1x (855-546)

1x (855-228)

(NL) Pakket inhoud: Controleer!

(SLO) Vsebina paketa: Preverite!




2.   +  →  

  → **1** P. 3,4,5,6,7,8,9,10,11,12,
13,17,18,19,20,21 (810-118)

2 P. 3,4,5,6,7,8,9,10,11,12,
13,14,15,21 (810-100)

Ford Transit Connect Van L2 (2013 -->)

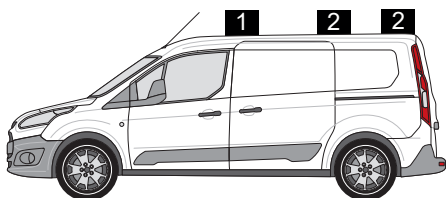


(810-100)
(810-118)


  → **1** P. 3,4,5,6,7,8,9,10,11,12,
16,17,18,19,20,21 (810-118)

2 P. 3,4,5,6,7,8,9,10,11,12,
16,17,18,19,20,21 (810-117)

Ford Transit Connect Van Double Cab L2 (2013 -->)



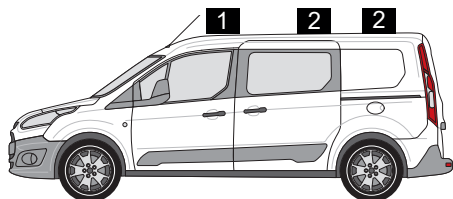


Ford Transit Connect Kombi L2 (2013-->)
Ford Tourneo Connect L2 (2013-->)


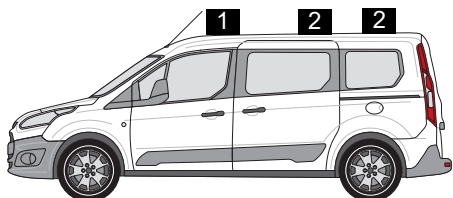


(810-117)
(810-118)



3. 

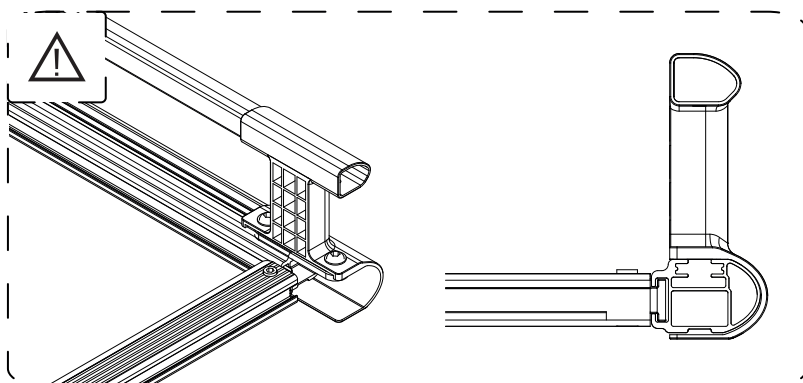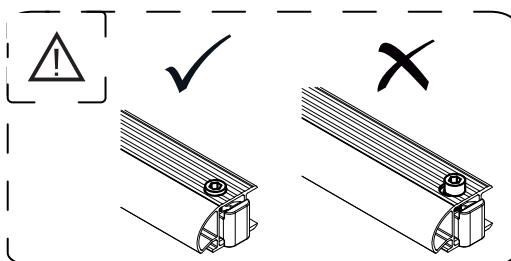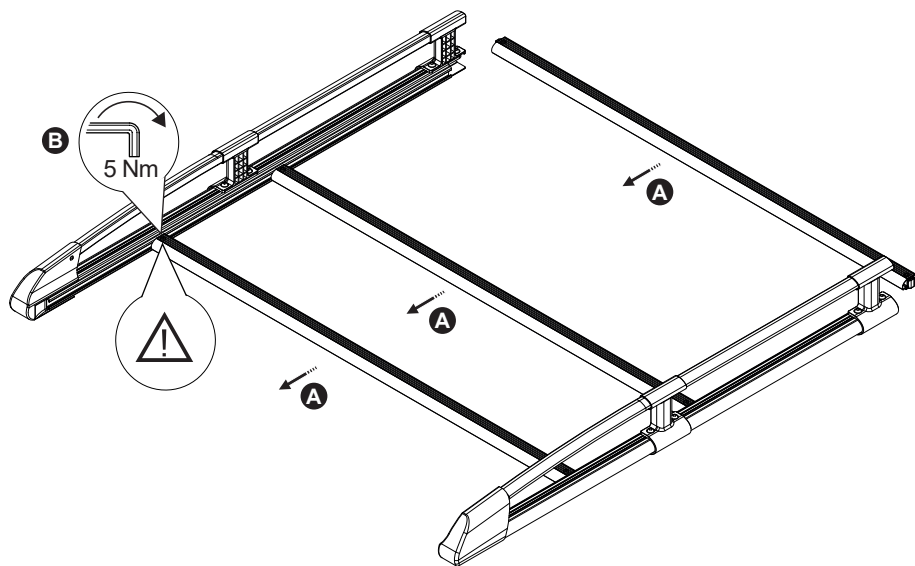






4. 

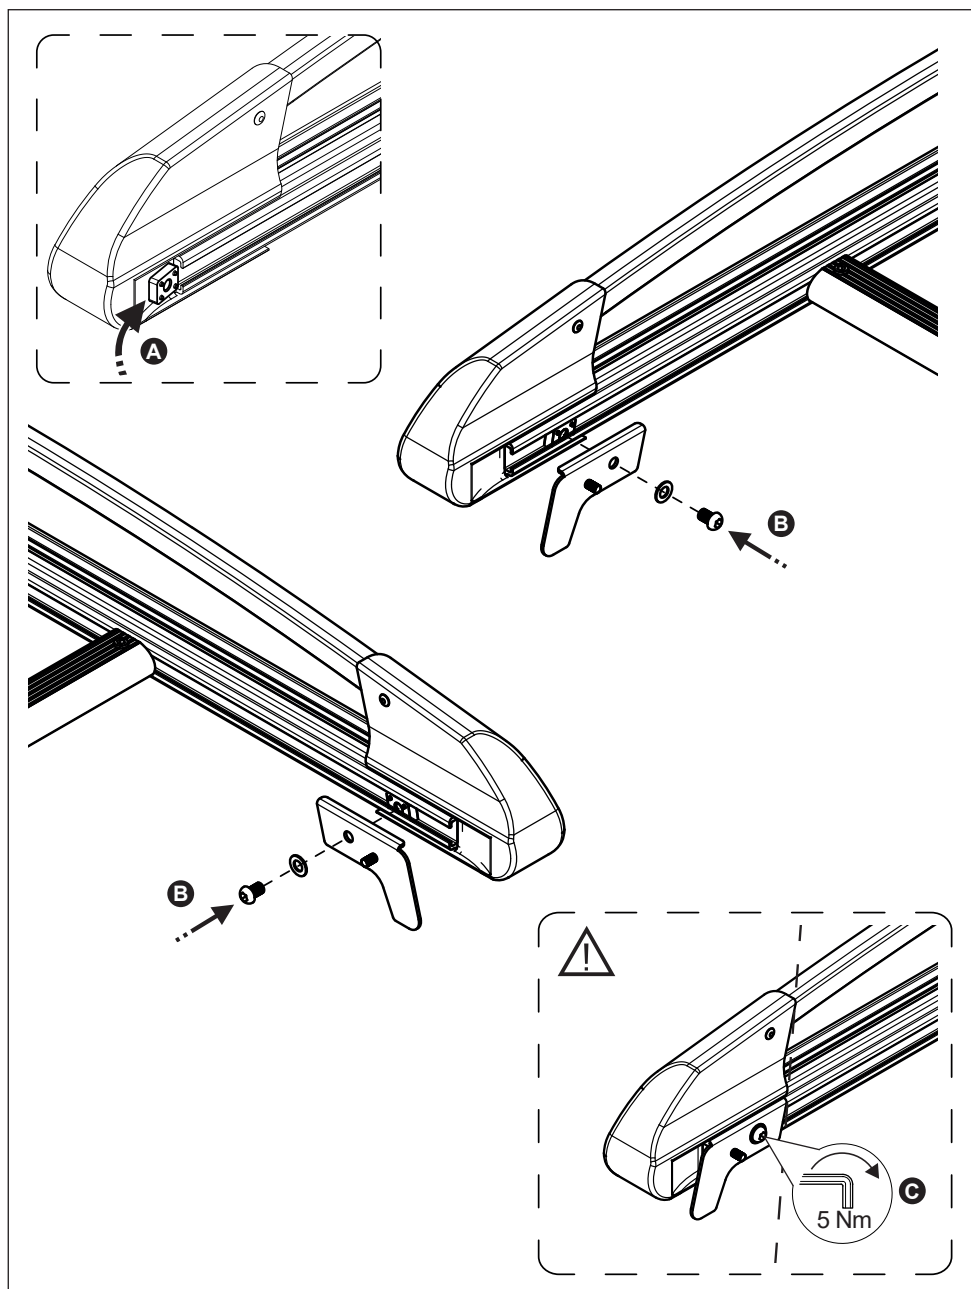


5. 

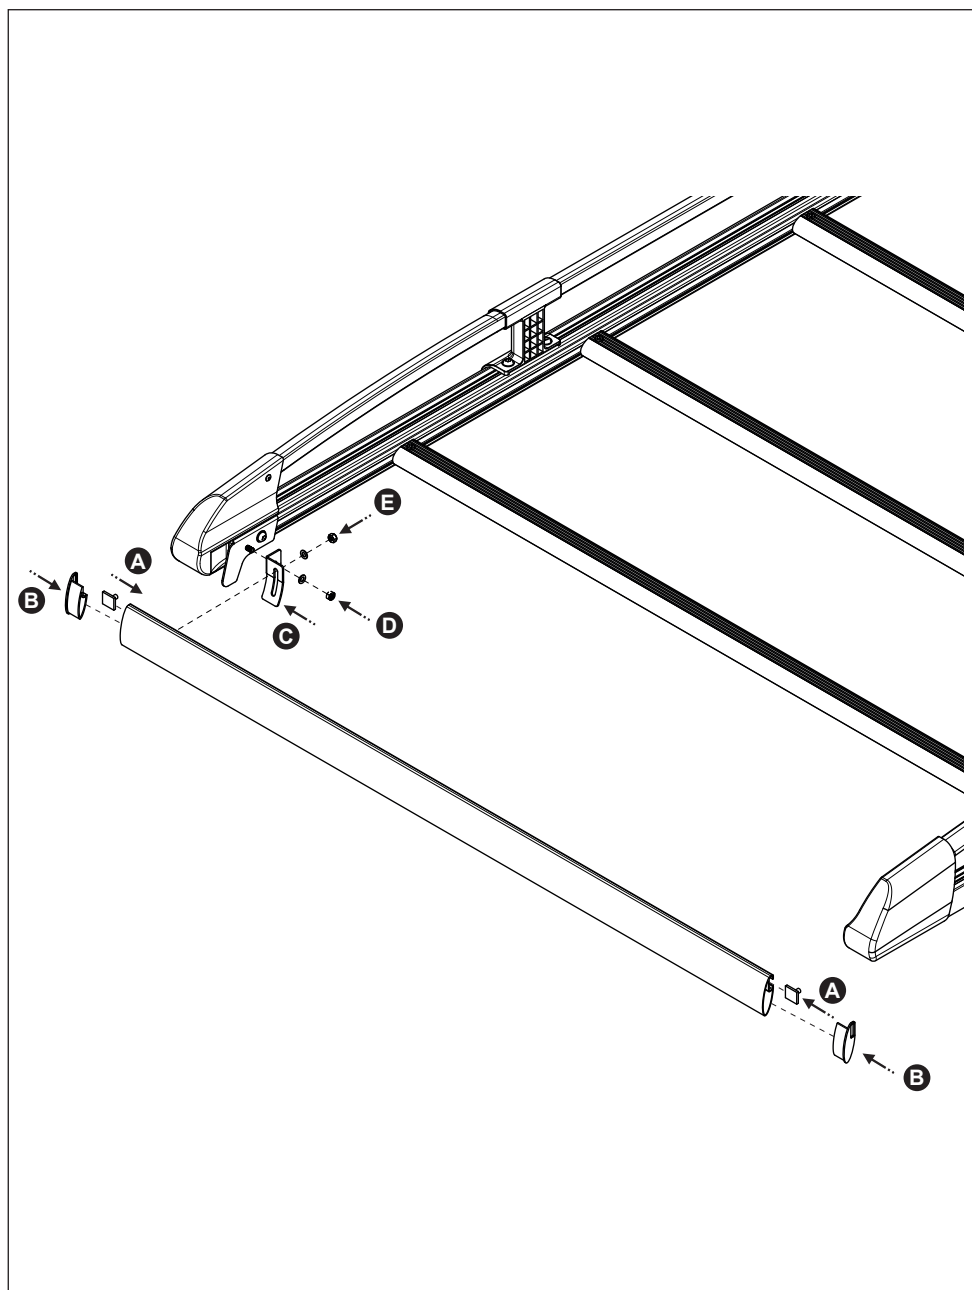


6. 

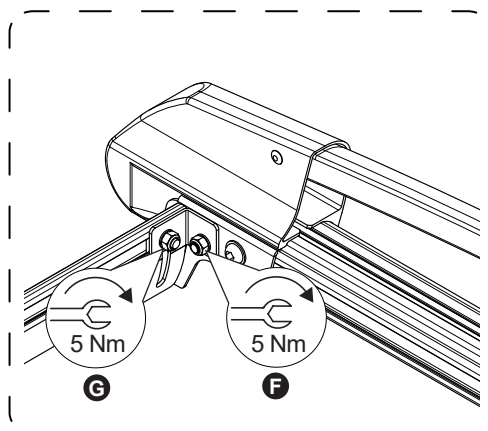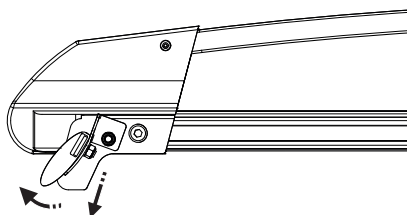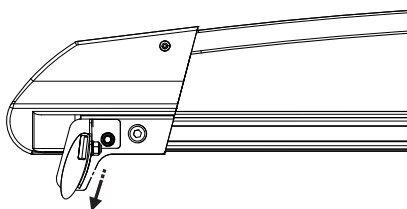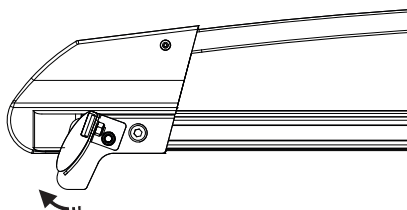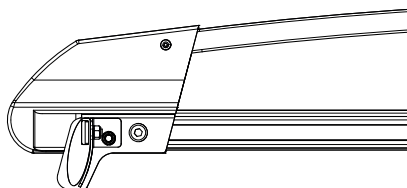





7.

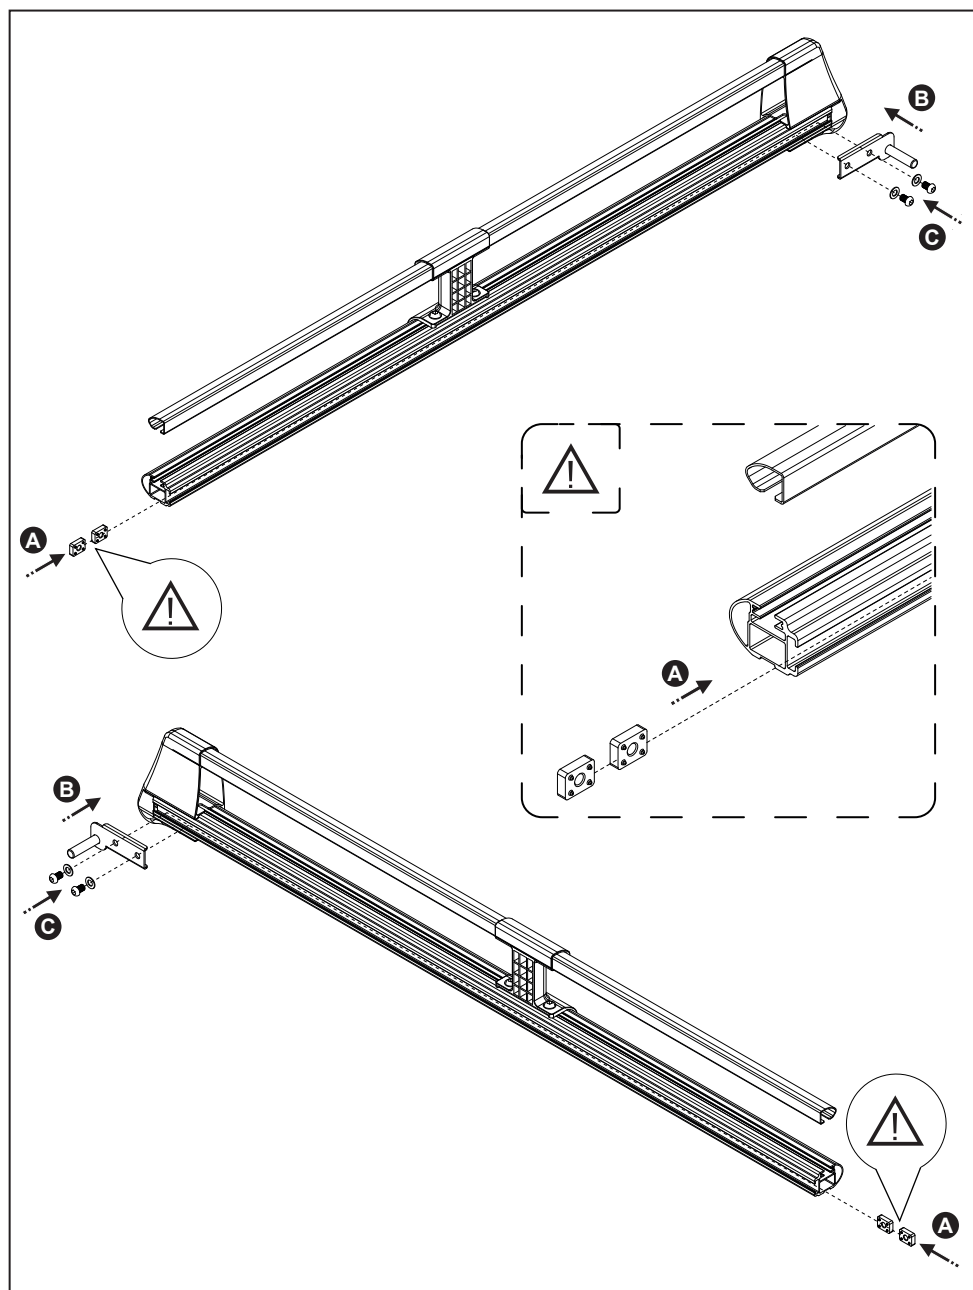
8. 

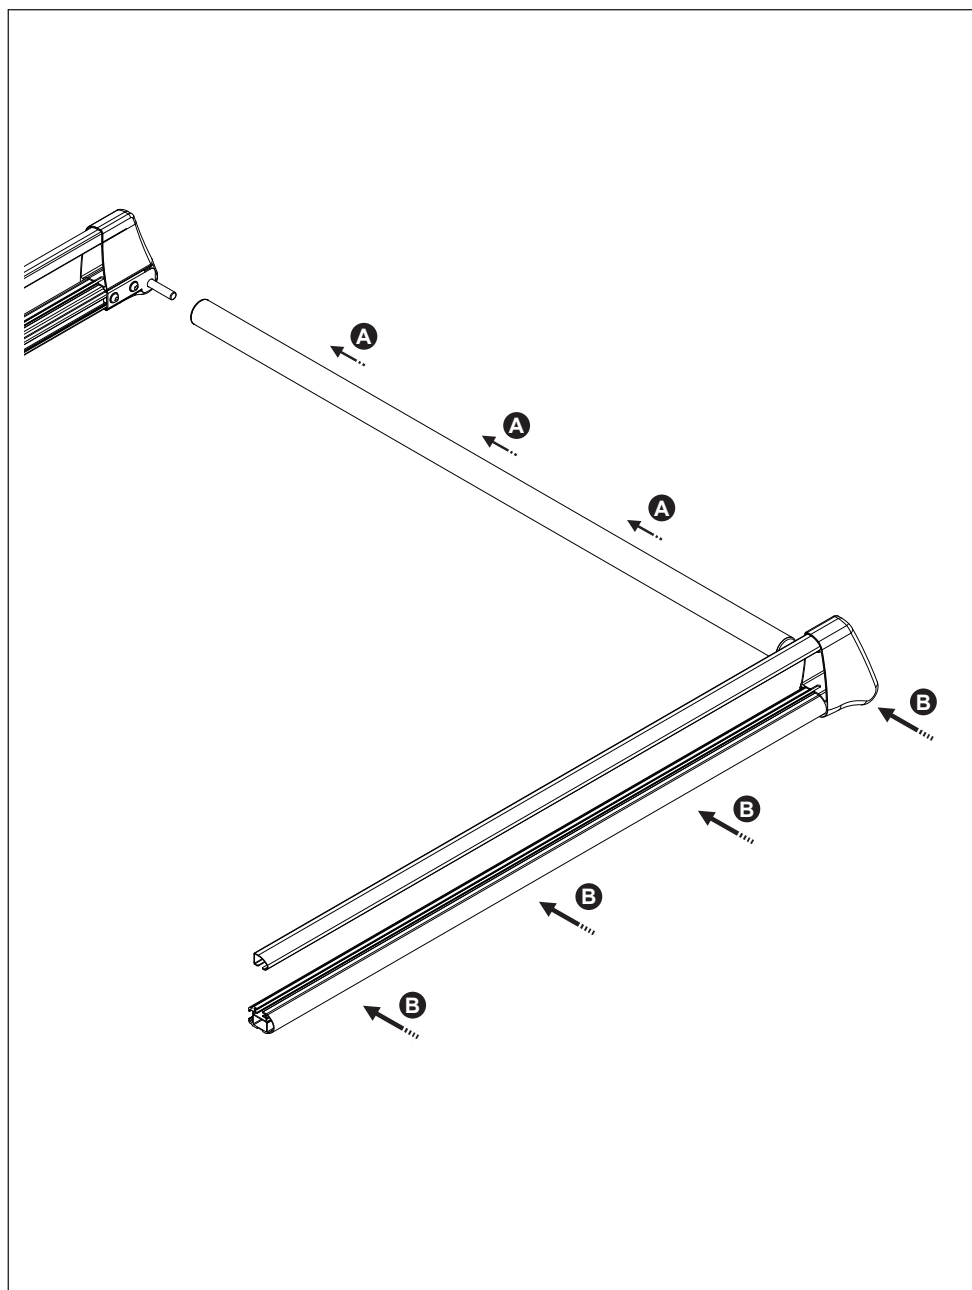


10.

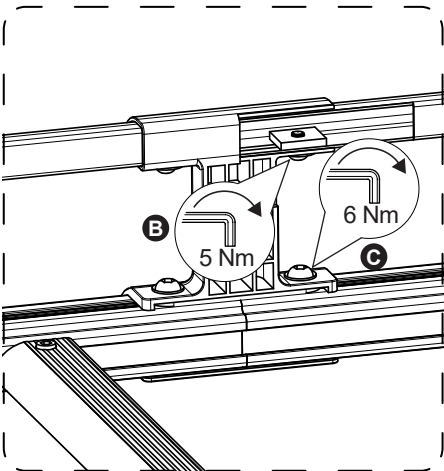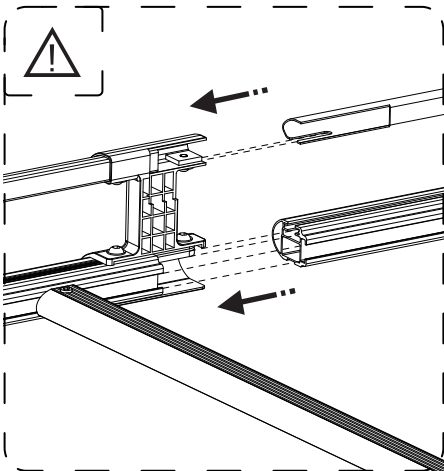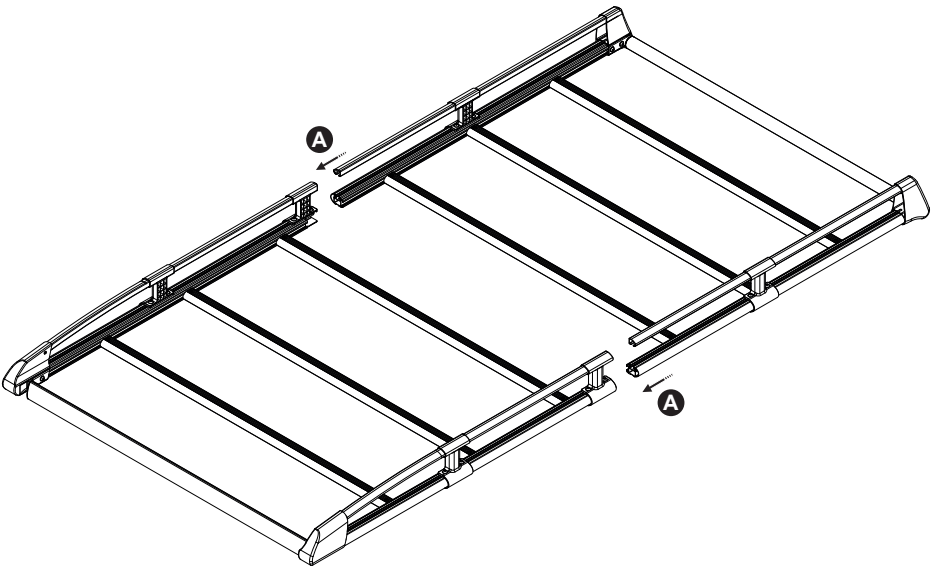


11.

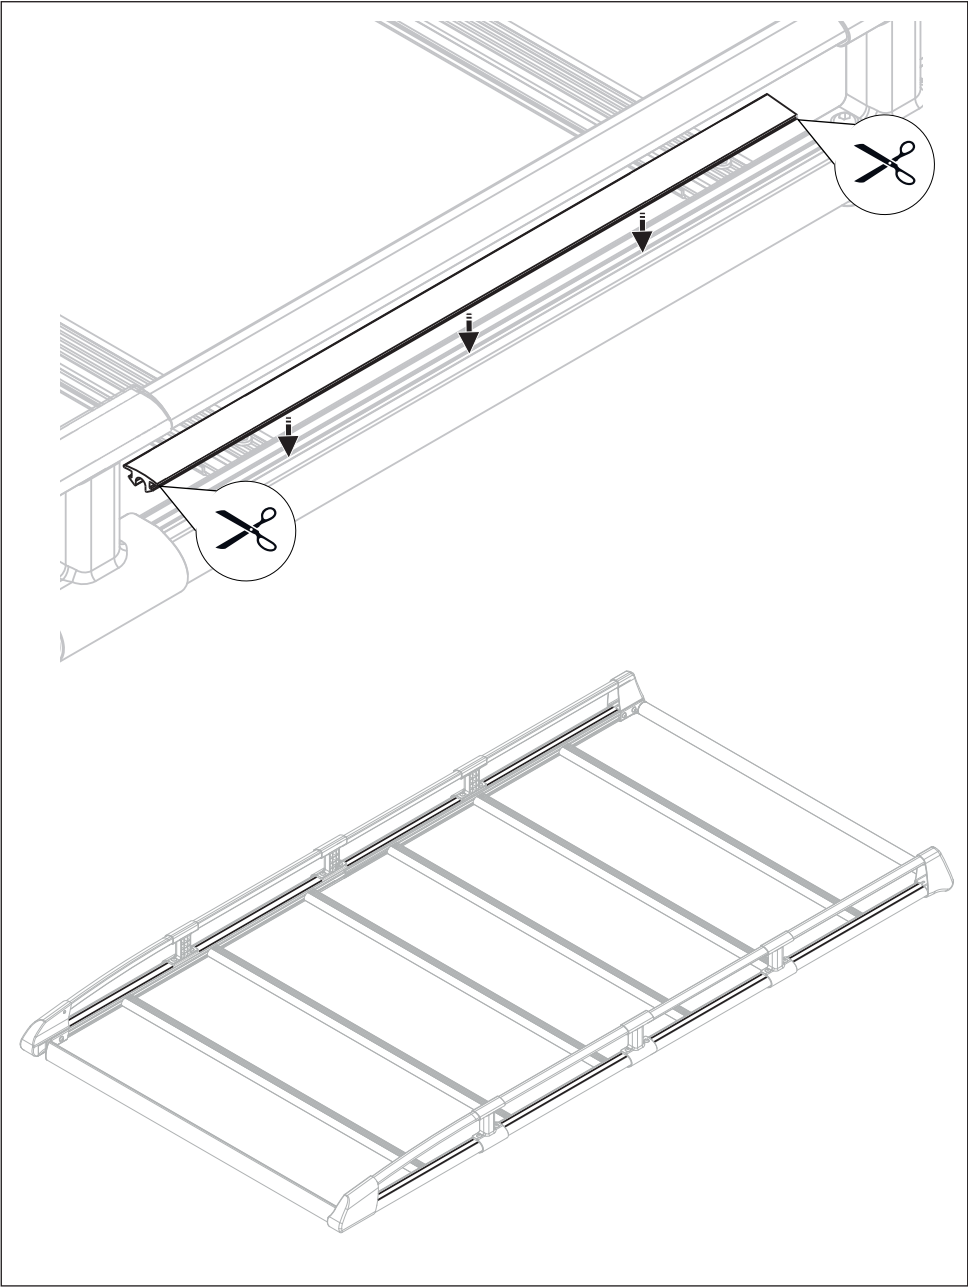



12.

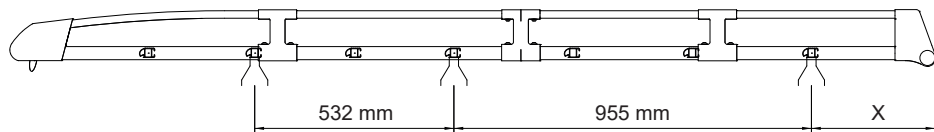

X = 330 mm



X = 170 mm

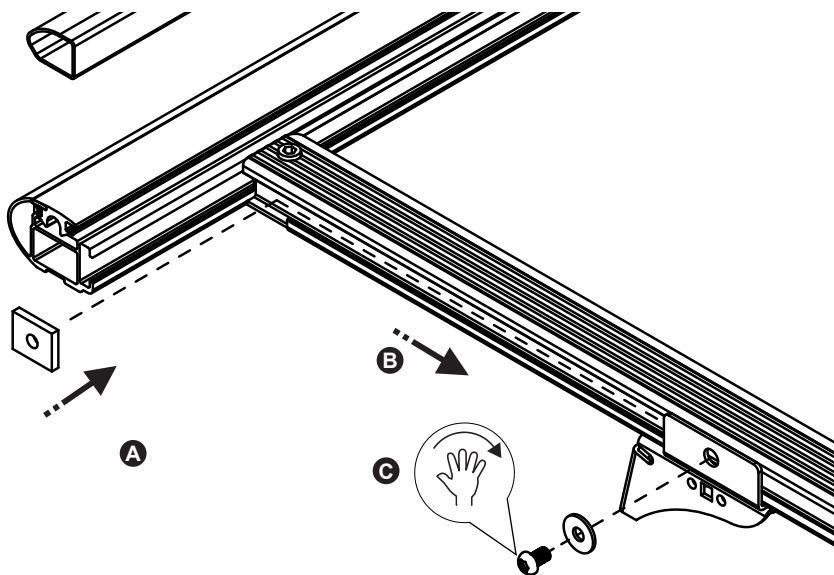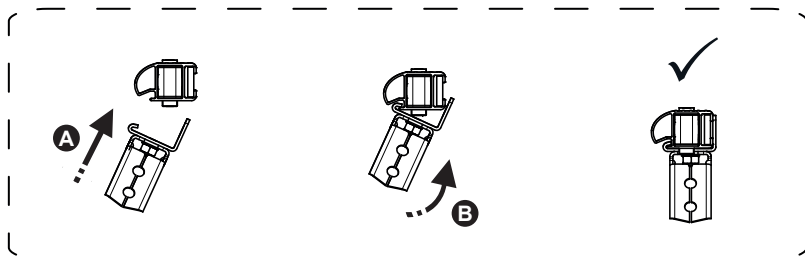


13.



(810-100)


Transit Connect Van (2013 -->)

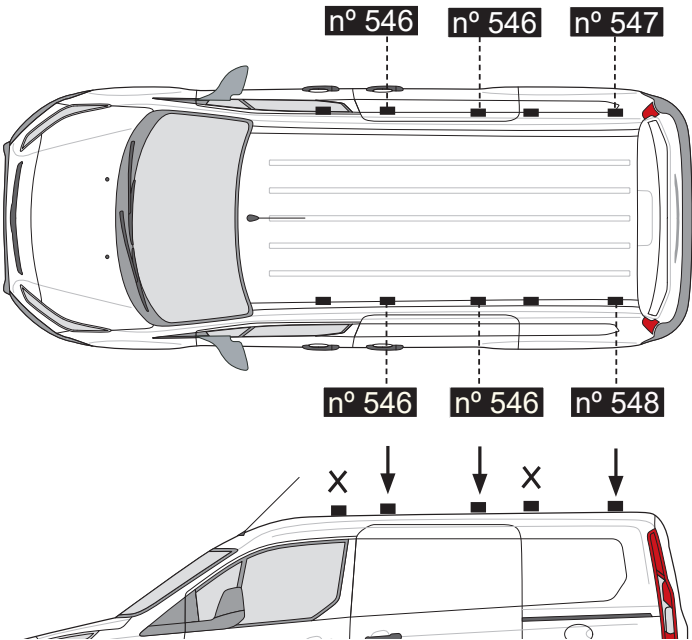

14.




(810-100)

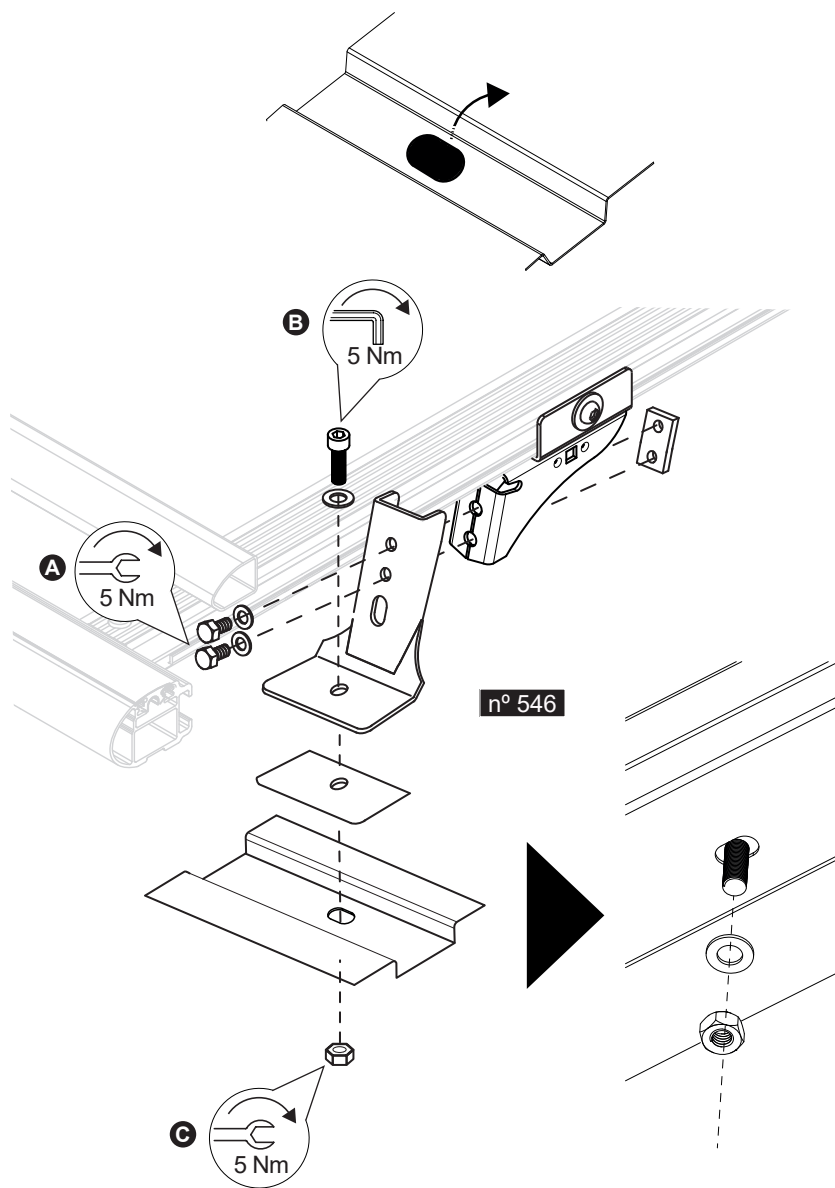

15.



(810-110)




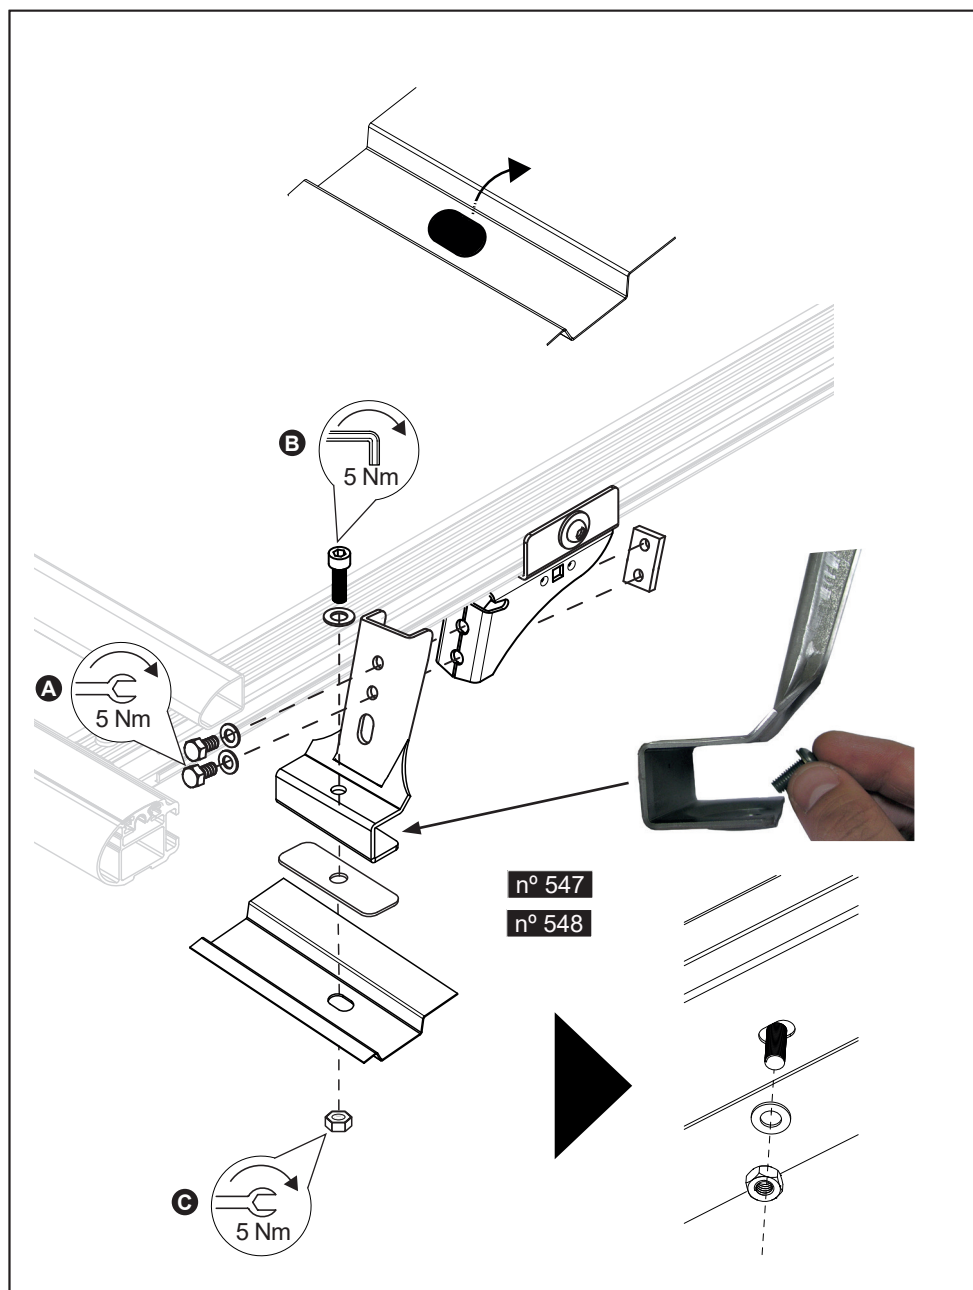


16.



(810-117)
(810-118)


Transit Connect Van Double Cab (2013 -->)
Transit Connect Kombi (2013-->)
Tourneo Connect (2013-->)

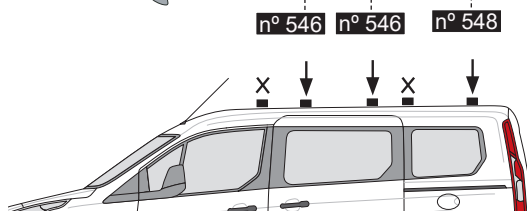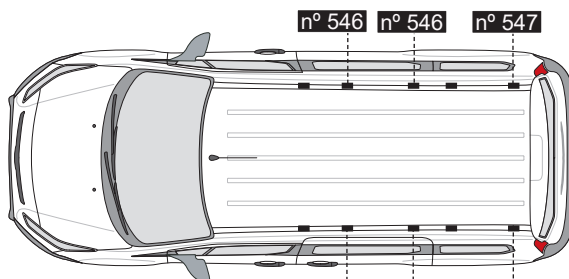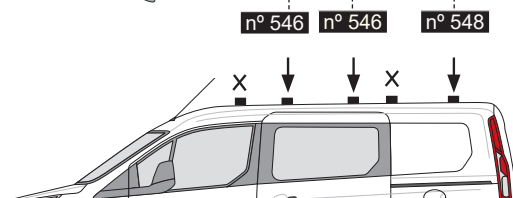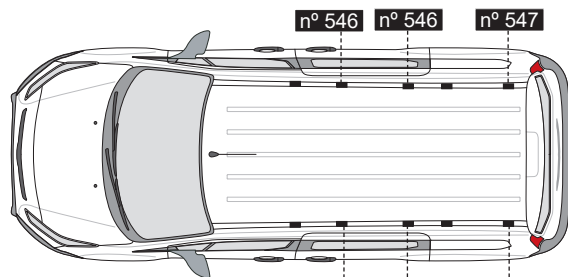

17.









(810-117)
(810-118)

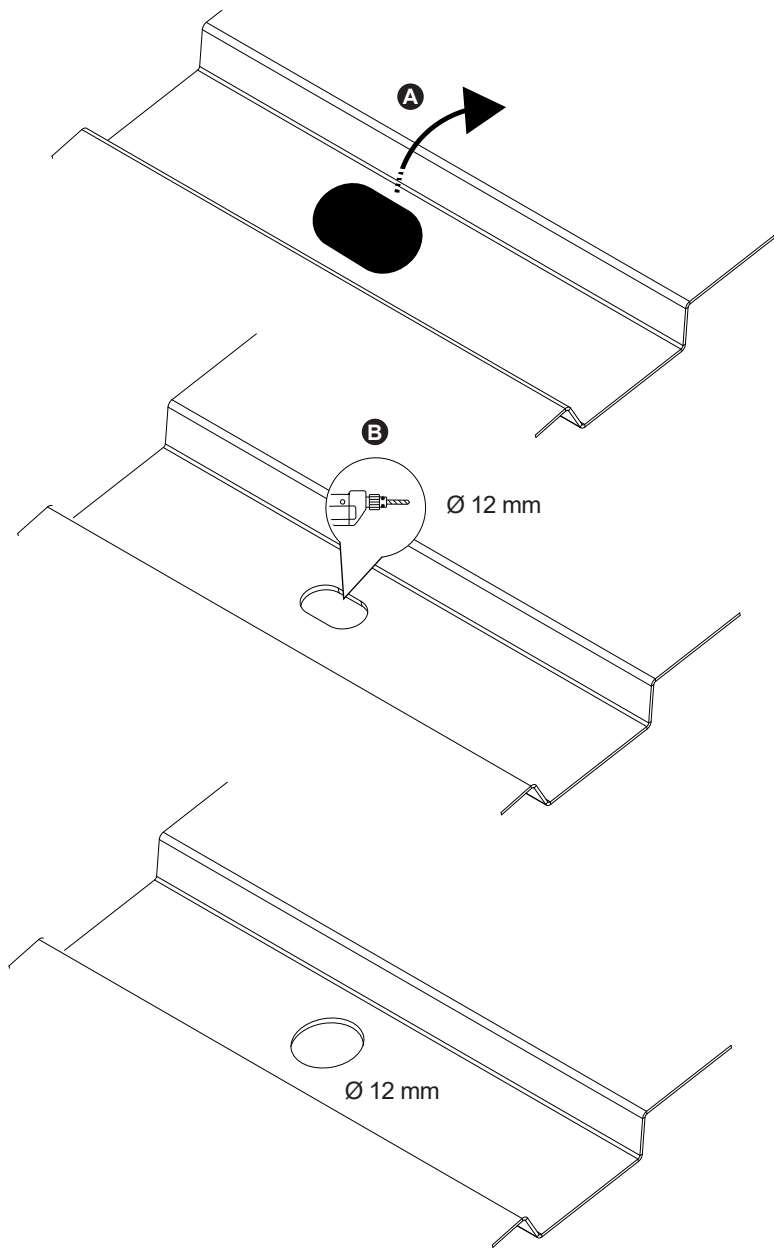

18.




(810-117)
(810-118)

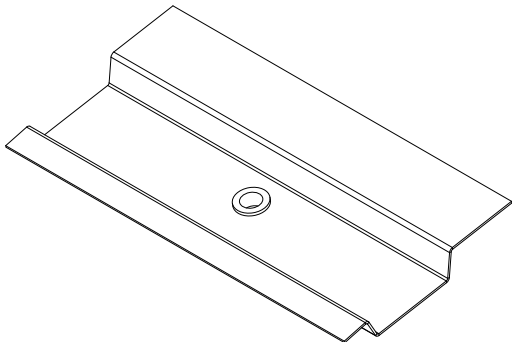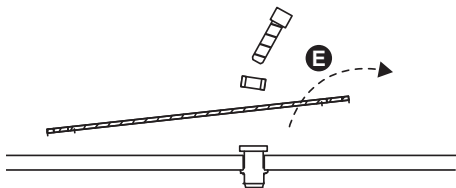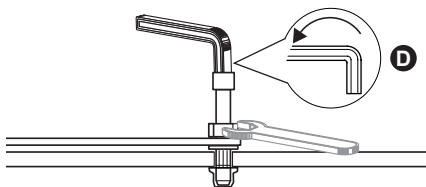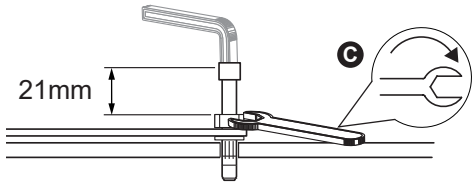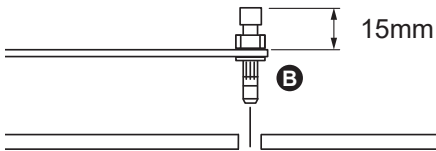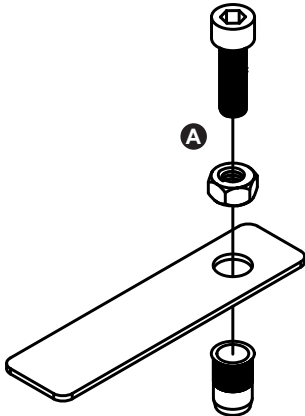

19.




(810-117)
(810-118)

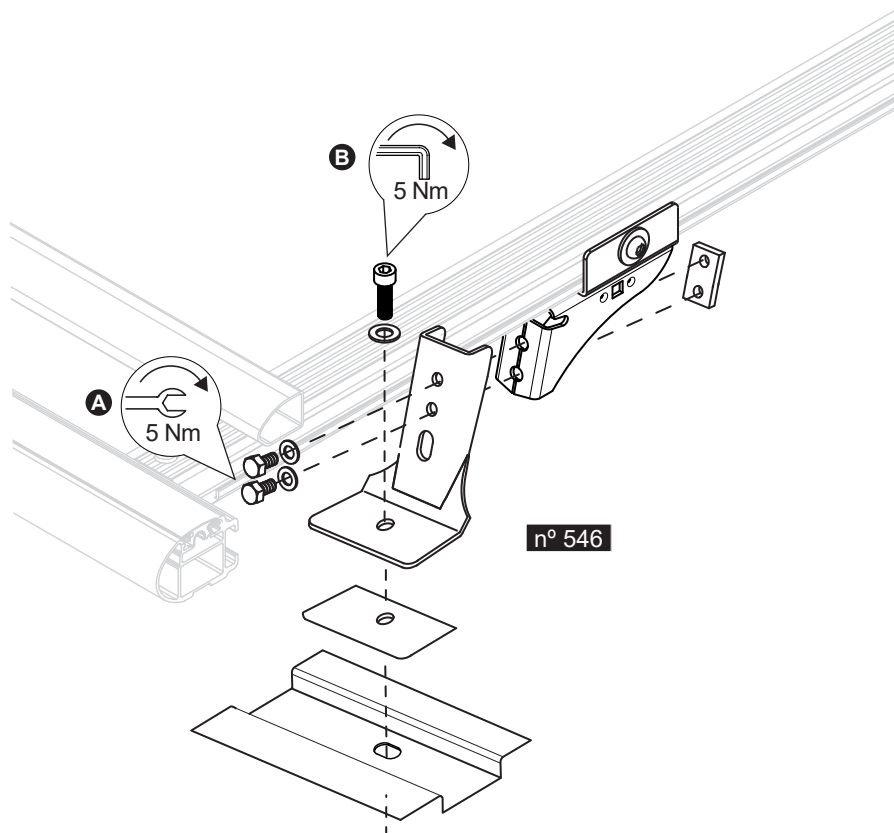

20.



(810-117)
(810-118)

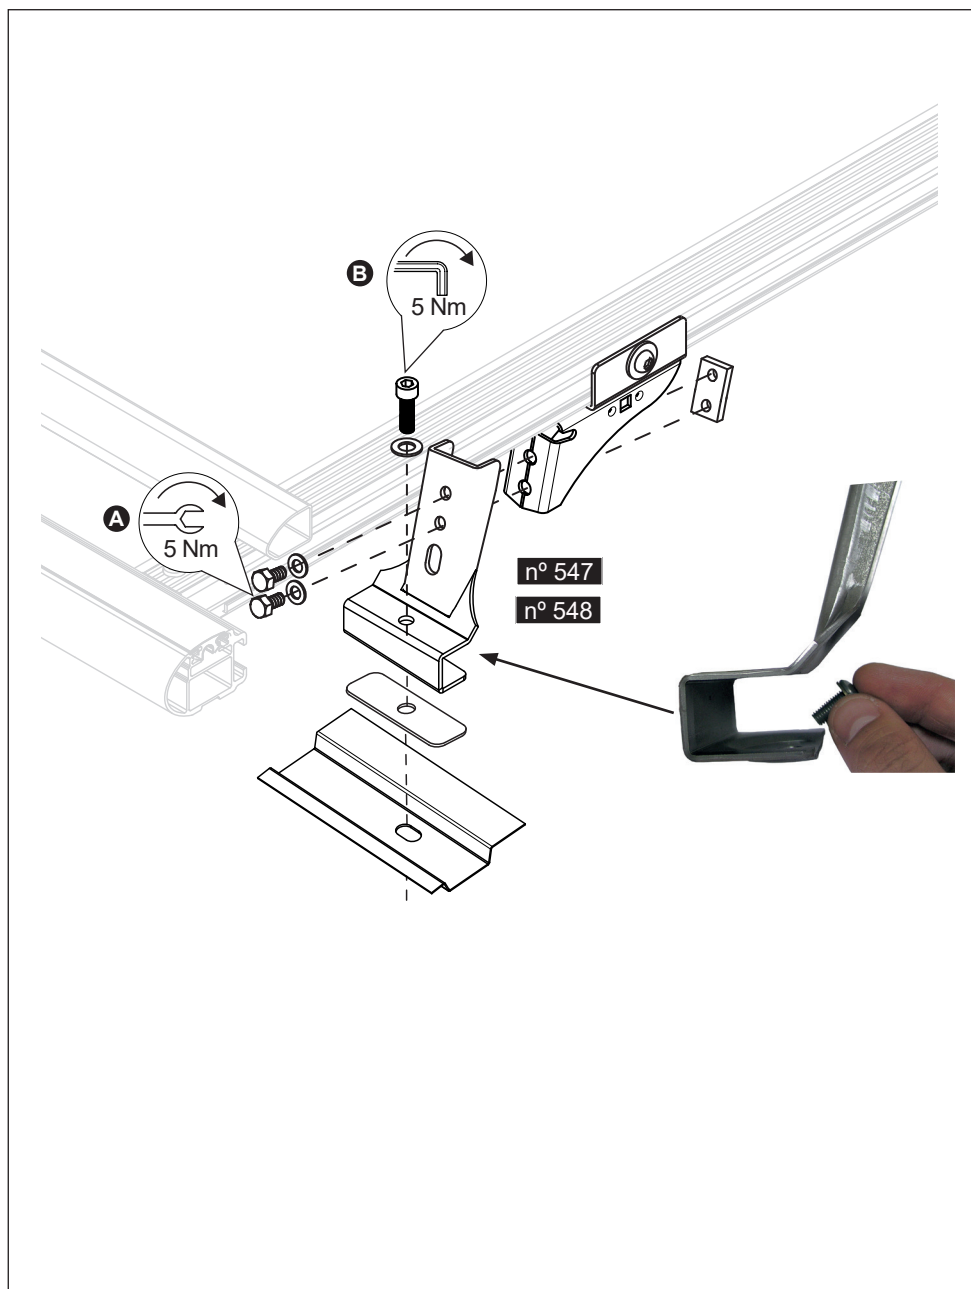

21.

